

Hinweis / Note

Erforderliche Arbeiten dürfen nur von entsprechend qualifizierten Personen durchgeführt werden. Lesen Sie diese Montageanleitung in Ruhe bis zum Ende bevor mit den Arbeiten begonnen wird. Diese Montageanleitung dient nur als Richtlinie und ist nicht für einen bestimmten Motorradtyp erstellt.

- Bitte verwenden Sie nur geeignetes Werkzeug.
- Achten Sie auf einen sicheren Halt des Motorrads während der Arbeiten.
- Eine zusätzlicher Helfer erleichtert die Montagetätigkeit.

Therefore, any necessary work may only be carried out by appropriately qualified persons. Please read these assembly instructions in full before beginning work. These instructions are intended as a general guide and are not specific to any particular type of motorcycle.

- Use only suitable tools.
- Ensure that the motorcycle is held securely during work.
- An additional assistant simplifies the assembly process.

Achtung / Caution



Nach erfolgter Montage bei vollem Lenkeinschlag prüfen, ob hydraulische Leitungen und Kabel weder spannen noch scheuern. Es ist ggf. notwendig, die Leitungen zu verlängern. Hierfür kann der Artikel 4230-MT111-BL verwendet werden.

Der feste Sitz der Bauteile sollte regelmäßig überprüft werden. Sollte ein Bauteil Beschädigungen aufweisen, muss dieses umgehend ersetzt werden.

Irrtümer & Änderungen vorbehalten. Kein Anspruch auf Richtigkeit. Bei Fragen oder Unsicherheiten beim Anbau wenden Sie sich bitte an unseren Support oder einen qualifizierten & zertifizierten Zweiradmechaniker. Keine Haftung für Schäden durch unsachgemäße Montage.

After installation, check that the hydraulic lines and cables are neither under tension nor chafing when the steering wheel is fully turned. It may be necessary to extend them. Article 4230-MT111-BL can be used for this purpose.

However, a regular check of the tight fit of the components must be ensured. If a component shows signs of damage, it must be replaced immediately.

Subject to errors and changes. No claim to accuracy. For questions or uncertainties during installation, please contact our support team or a qualified and certified motorcycle mechanic. No liability for damages caused by improper installation.

LENKERERHÖHUNG MIT VERSATZ HANDLEBAR RISER WITH OFFSET

Art.Nr./Item-no.:

4245-VTS-30-18-BL

Erhöhung 30mm / Versatz 18mm / Lenker Ø26mm
Raise 30mm / Offset 18mm / Handlebar Ø26mm



Inhalt / Content

2x Lenkererhöhung mit Versatz
4x Innensechskant Schraube M8x20
6x Schraubenkappe
Allgemeine Betriebserlaubnis

2x handlebar riser with offset
4x allen screw M8x20
6 x screw cover
product certificate



160925

M25224

Montageanleitung / Installation Instruction

Montage Abb. A1

Zunächst Lenker demontieren, dann mit Schritt 1 fortfahren.




1. Lenkererhöhung aufsetzen
2. Schrauben M8x20 einsetzen und festziehen (**23 Nm**)
3. Lenker einsetzen
4. Obere Lenkerklemmung auflegen, so das „Triumph“-Schriftzug aus Fahrerposition lesbar ist und Lenker ausrichten
5. Originale Schrauben M8 einsetzen und Schrauben in Fahrtrichtung vorne festziehen (**23 Nm**), dann Schrauben in Fahrtrichtung hinten festziehen (**23 Nm**). Es entsteht ein Spalt (Abb. A2)

Assembly Fig. A1

First remove handlebar then continue with step 1.

1. Insert handlebar riser
2. Insert and tighten bolts M8x20 (**23 Nm**)
3. Insert handlebar
4. Position the upper handlebar clamp to ensure that the „Triumph“ lettering is legible from the rider's position and align the handlebars
5. Insert original bolts M8 and tighten bolts in the direction of travel at the front (**23 Nm**) then tighten bolts in the direction of travel at the rear (**23 Nm**). A gap is created (Fig. A2)

A1

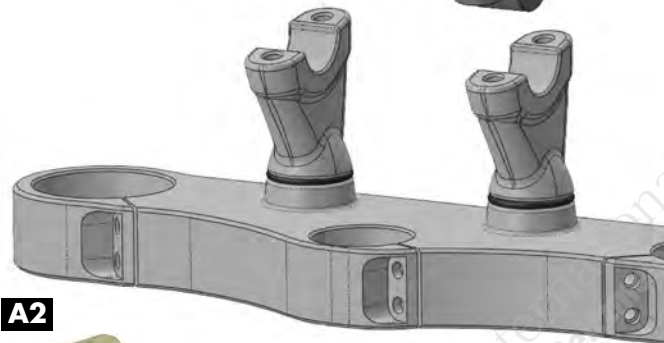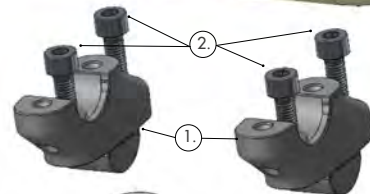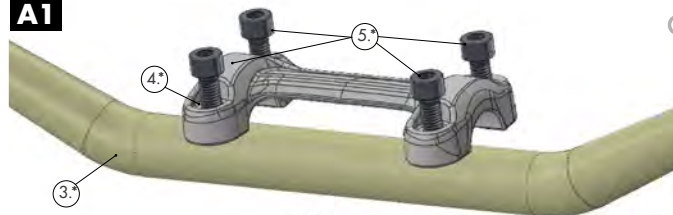

A2



* Originalteile verwenden
* Use original parts

HEPCO & BECKER

PA260225