

RCT-KT03-B-KIT

brake lever



GILLES



RCT-KT03-B-KIT

brake lever



**ES WIRD EMPFOHLEN DEN ARTIKEL VON EINER FACHWERKSTATT INSTALLIEREN ZU LASSEN!**  
Diese Anbauanleitung ist sorgfältig und vollständig vor Beginn der Einbauarbeiten durchzulesen.

#### Allgemeine Hinweise

- Ein unsicher aufgestelltes Motorrad kann bei den folgenden Arbeiten umfallen! Achten Sie darauf, dass das Fahrzeug sicher steht.
- Verbrennungsgefahr bei heissem Motor und Auspuff! Vor Beginn der Arbeit heiße Fahrzeugteile abkühlen lassen.
- Kinder und Tiere aus dem Arbeitsbereich fernhalten.
- Schmuck (Uhr, Ringe, Ketten, etc.) vor Arbeitsbeginn ablegen. Es besteht Unfallgefahr durch Hängenbleiben.
- Die Montage und Funktion bezieht sich ausschliesslich auf Serienmotorräder.
- Nach Montage des Produkts durch eine Werkstatt, ist diese Anbauanleitung dem Kunden auszuhändigen.
- Bewahren Sie die Anbauanleitung sorgfältig auf.

#### Montagehinweise

- Alle Schrauben und Muttern werden mit Drehmoment nach DIN/ISO festgezogen. Abweichende Drehmomente werden angegeben.
- Lagerungen und Schraubverbindungen sind mit einem geeigneten Schmiermittel einzusetzen.
- Arbeiten und Entlüftung am Bremsystems sind nur von fachkundigem Personal durchzuführen.
- Es ist unbedingt darauf zu achten, dass keine Züge, Kabel oder Leitungen (insbesondere Bremsleitungen) andere Fahrzeugkomponenten berühren oder daran scheuern.
- Nach jeder Montage sind alle Schrauben auf festen Sitz und das vorgeschriebenes Drehmoment zu überprüfen.
- Es ist unbedingt darauf zu achten, dass alle Teile immer einen Mindestabstand von 5mm zu beweglichen Fahrzeugteilen haben.

#### **INSTALLATION RECOMMENDED BY AN OFFICIAL WORKSHOP OR DEALER!**

**You must read these Installation Instructions carefully and make sure you understand everything they contain, before commencing work.**

#### General instructions


- Please ensure the motorcycle is adequately secured before commencing work.
- Always make sure that the motorcycle is stable and firmly supported.
- A hot engine and exhaust system can burn. Allow all hot parts to cool off before commencing work.
- Keep children and pets away from the work zone.
- Remove all items of personal jewellery (rings, chains, wristwatch, etc.) before commencing work.
- The fitment instructions relate only to the fitment on a standard motorcycle.
- If a technician is installing the parts please ensure these instructions are passed to the owner.
- Please keep the instruction manual at a safe place.

#### Assembling note

- Screws, bolts and nuts are tightened in accordance with the applicable DIN/ISO standards. Tightening torques that deviate from the standards are stated.
- All threaded connections and bearings must be greased with suitable grease.
- Be careful to avoid scratches.
- Mounting and bleeding at the brake system only by skilled personal.
- Take care that no wires and hoses are too close or touching other components or moving parts.
- After each mounting check all bolts for correct tightening and specified torque moment.
- Take care that any parts always have a minimum clearance of 5 mm to any moving parts.







POS	ARTIKELNUMMER ARTICLE NO.	MENGE QTY.
1	UL-24-R-B	1
2	UB-28-B	1
3	RCT-EX-02-B	1
4	UTR-12-B	1
5	M6x20-7380-VA-TX-PRE10-1	2
6	M6x16-4762-VA	1

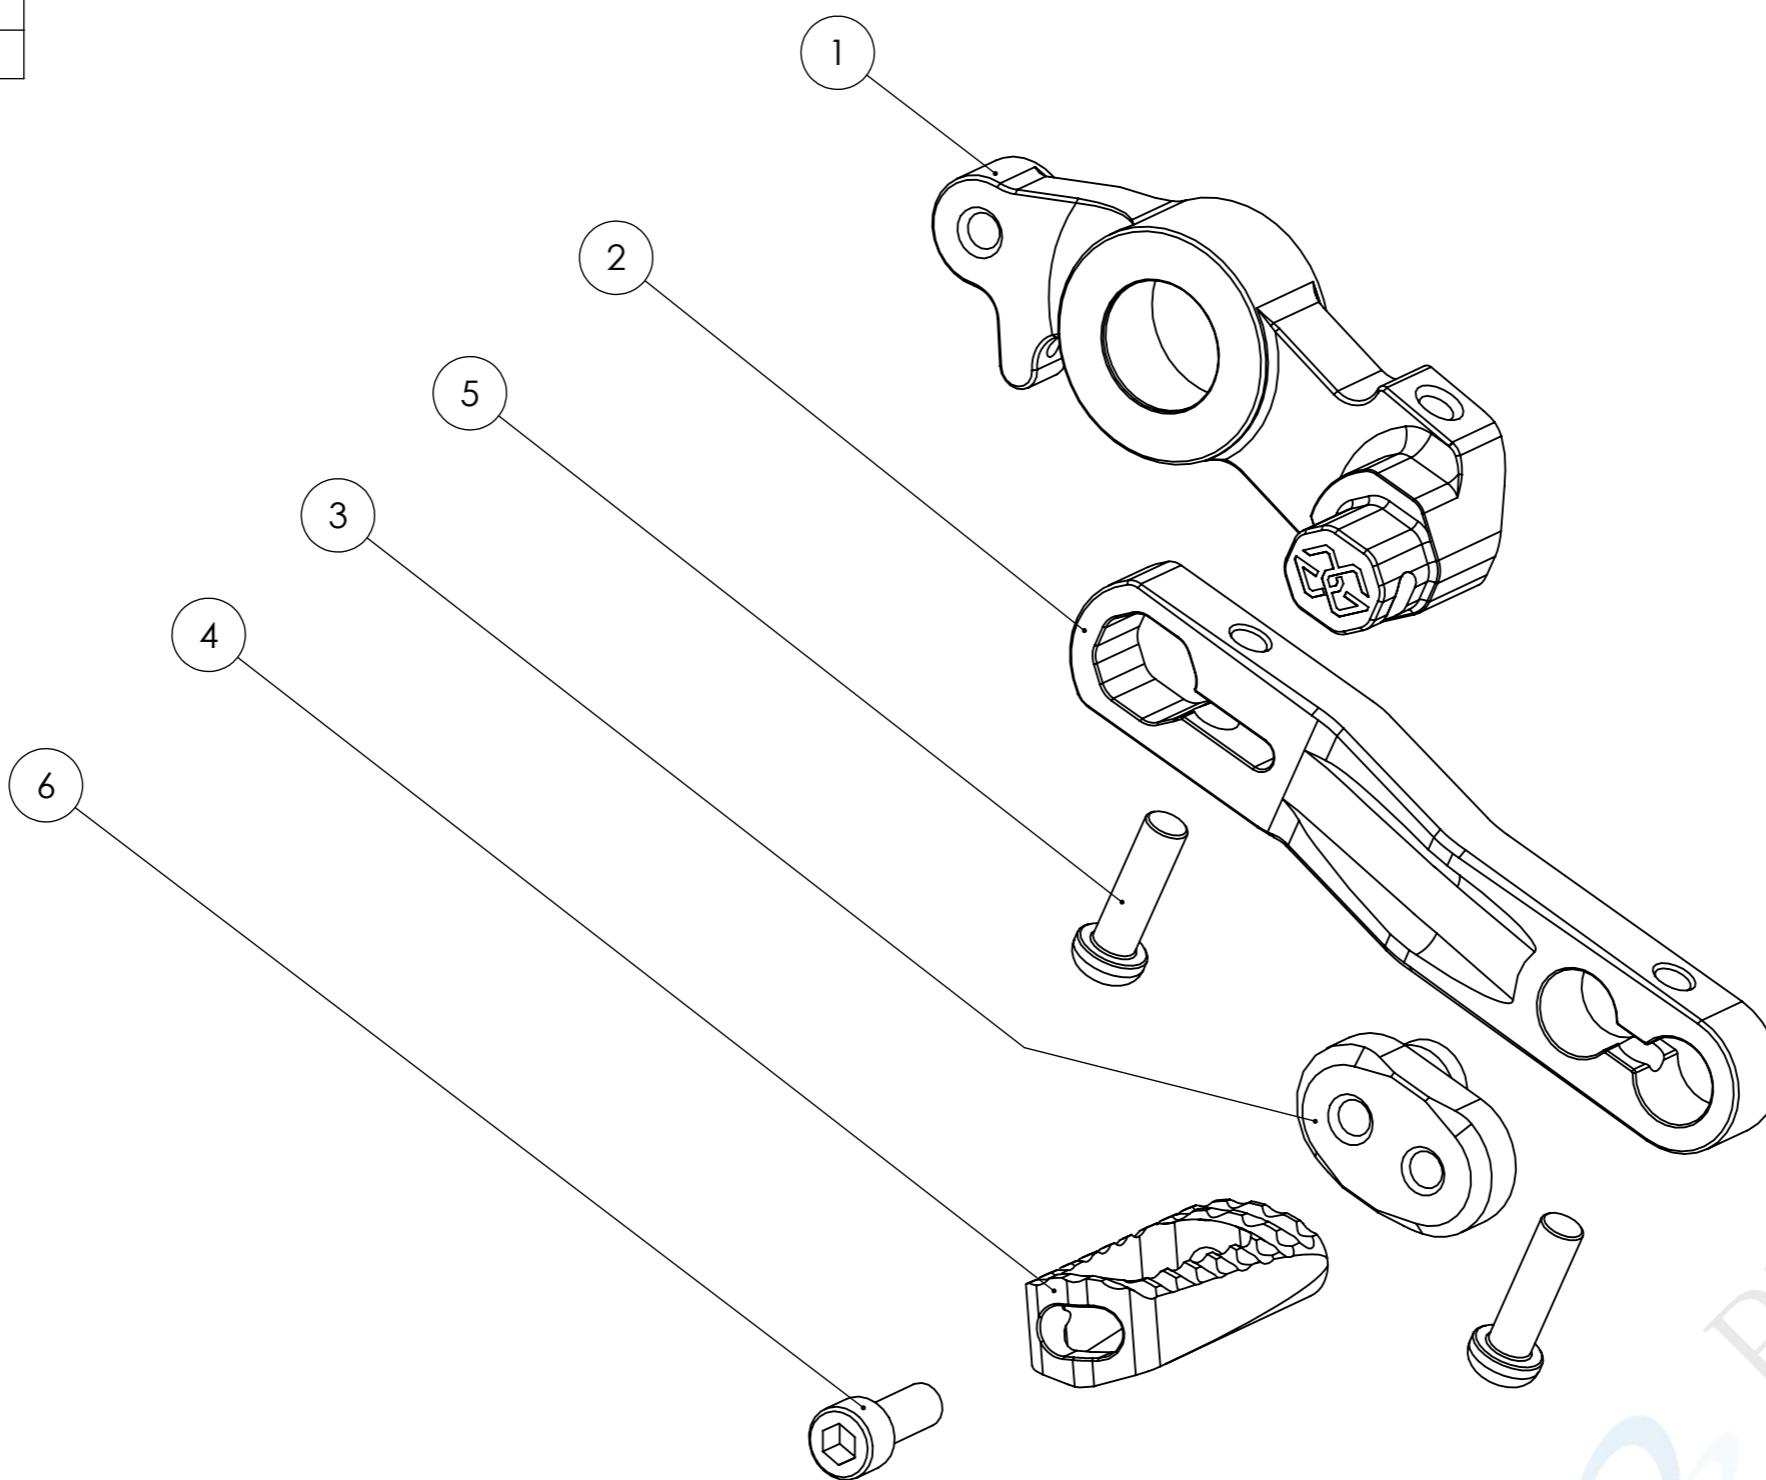

P&A International  
Peitzmeier Co.




RCT-KT03-B-KIT

brake lever

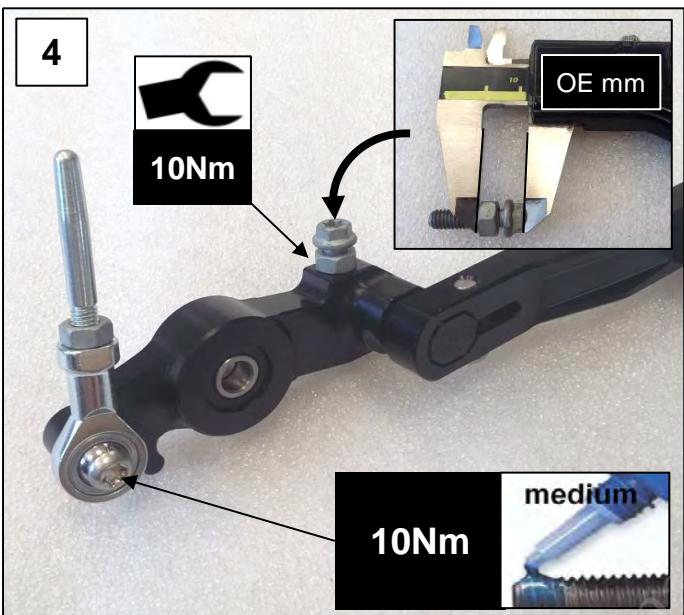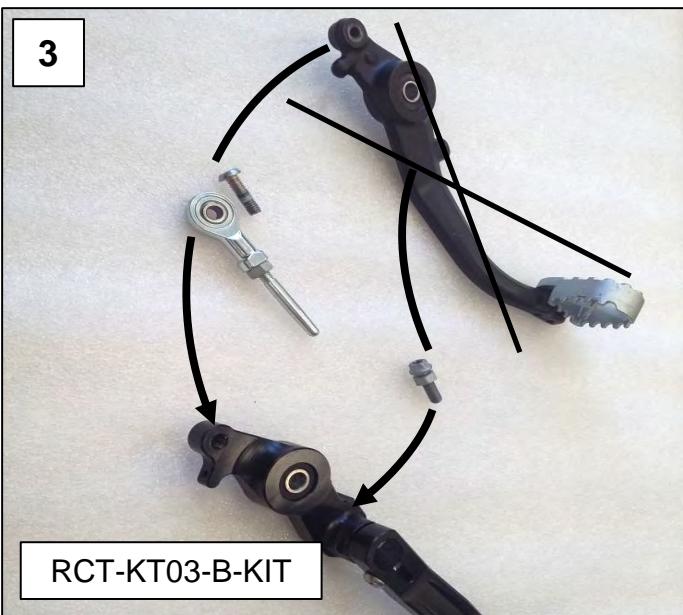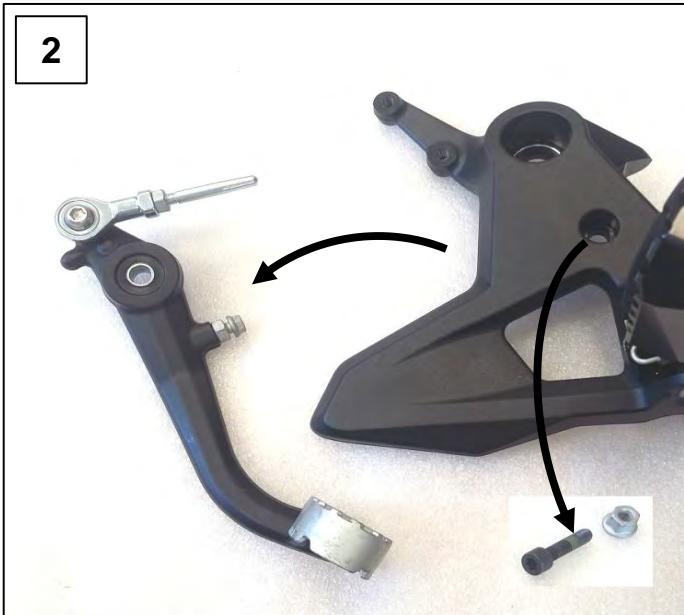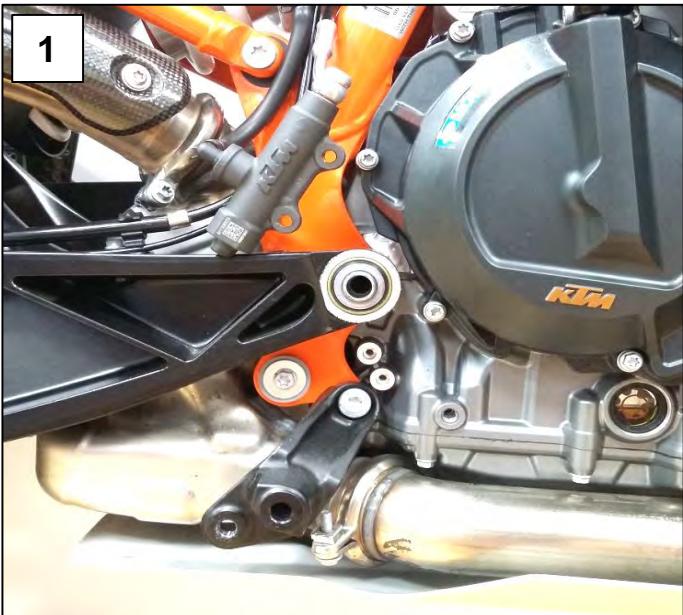

RCT-KT03-B-KIT


brake lever

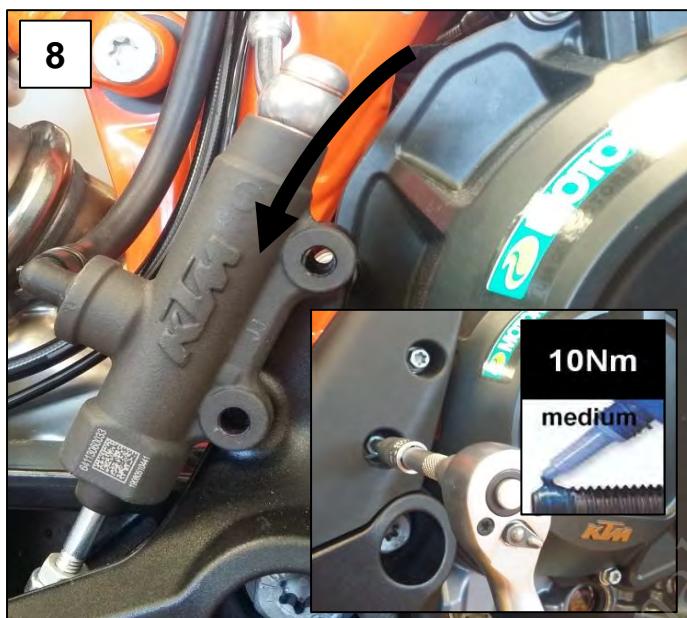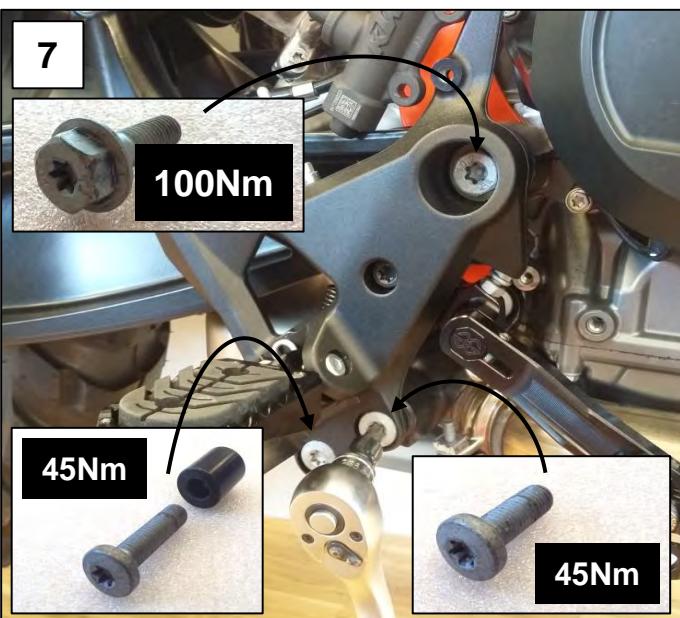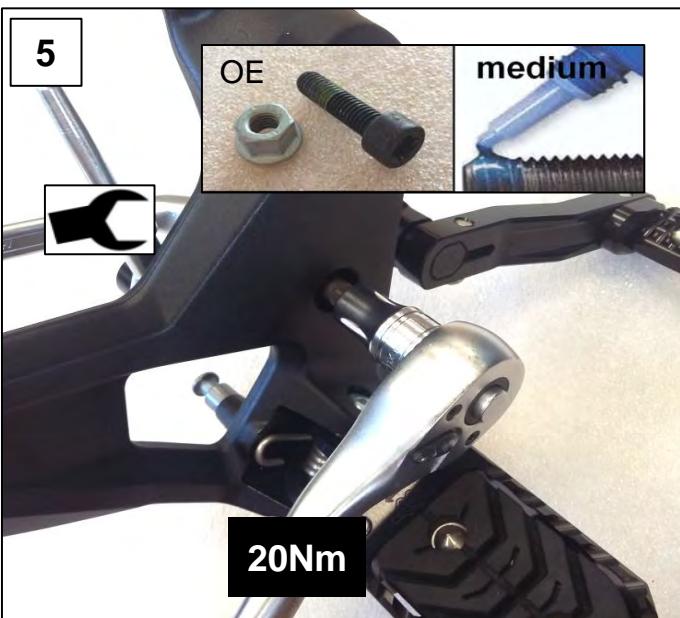

RCT-KT03-B-KIT







brake lever

**GILLES**

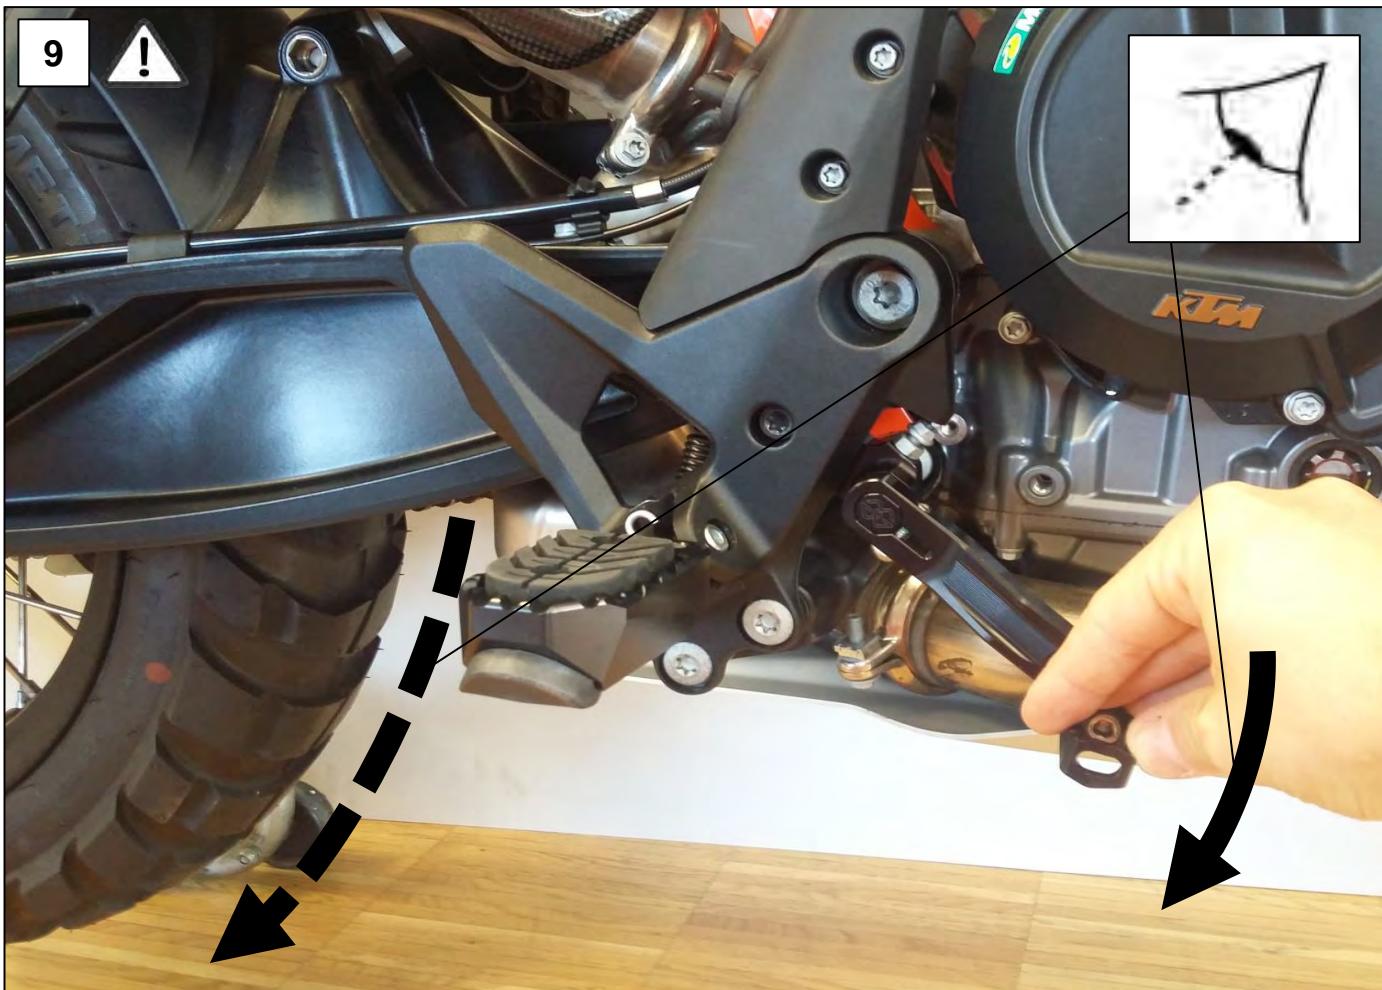

RCT-KT03-B-KIT

brake lever

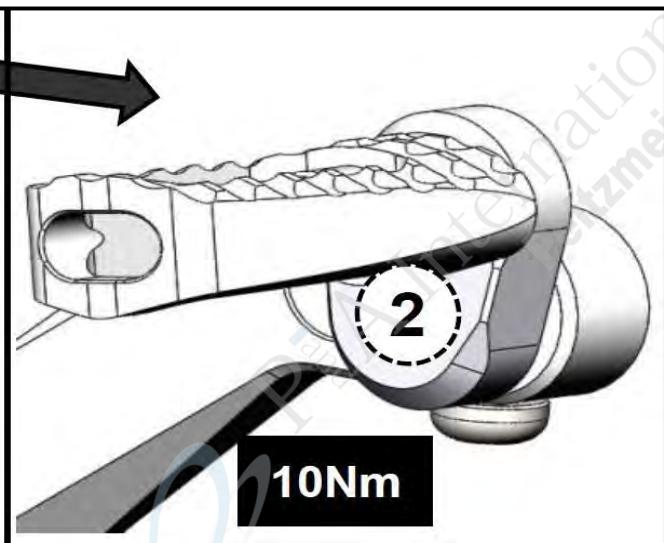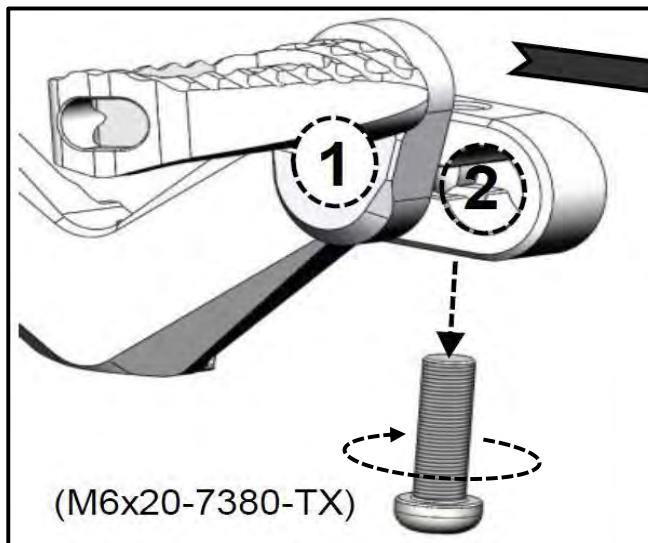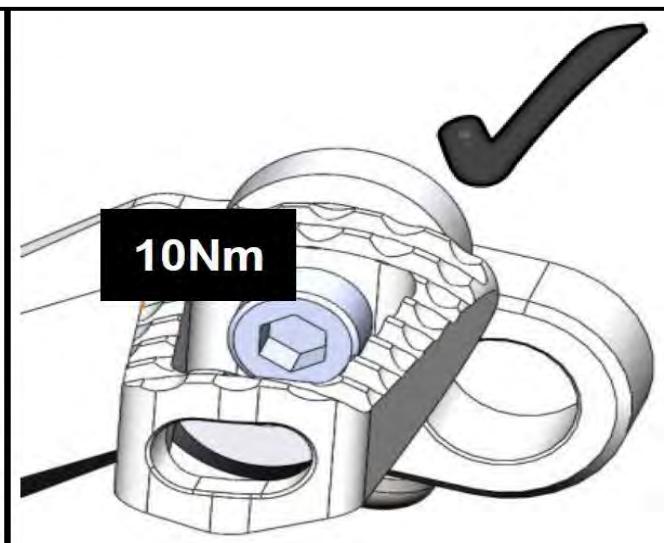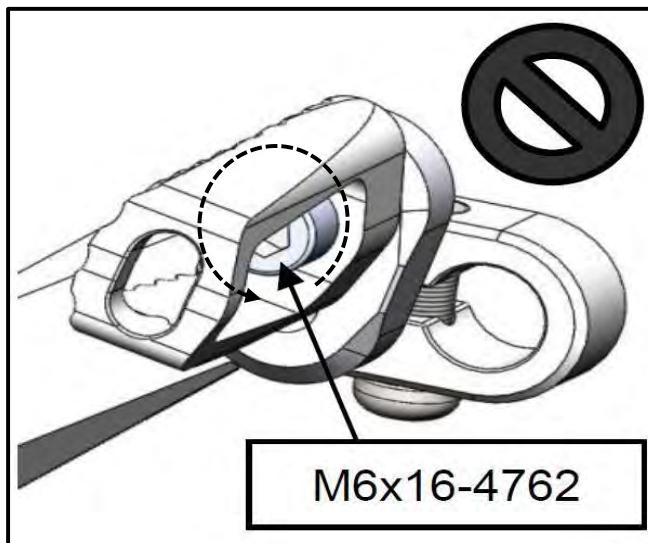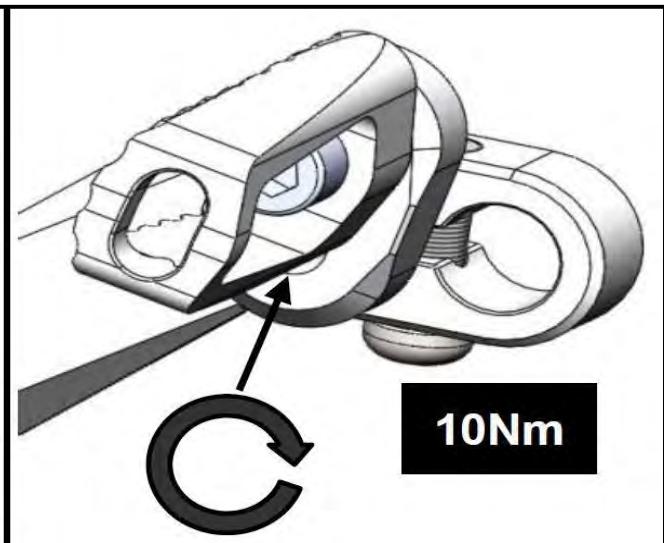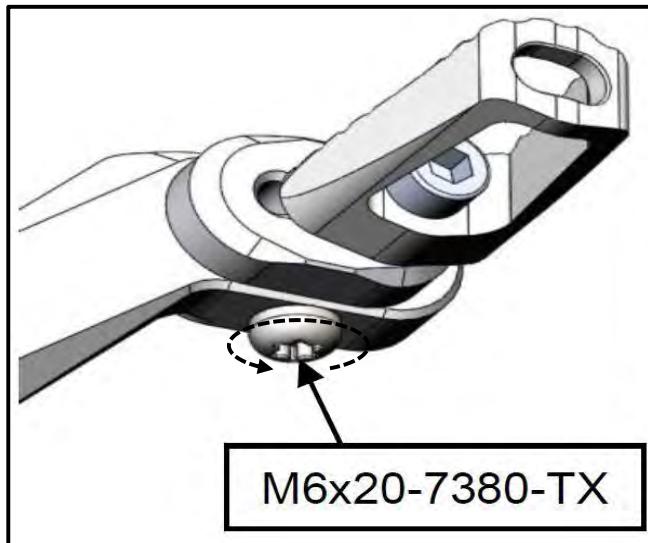

RCT-KT03-B-KIT

brake lever



Pos.	Description	Part-No.	Qty.	OK
1	certificate	ABE91249	1	
2	manual	RCT-KT03-B-KIT	1	
			<b>MA</b>	
			Datum	