



Lenker

Handlebar

Manubrio

Guidon

Manillar

Art.Nr.: 31001-10
31001-00 31000-50



Sollten Sie Spezialschrauben zur Aufnahme des originalen Navigationsgerätes verbaut haben, können diese weiter verwendet werden.
If you have installed special screws to accommodate the original navigation device, these can be used further.



M8x35 19Nm
Drehmoment
torque



M8x60 12Nm
Drehmoment
torque







Entfernen Sie die Abdeckung 1, danach lösen Sie die Stecker 2.

Remove cover 1, then unplug the connectors 2.



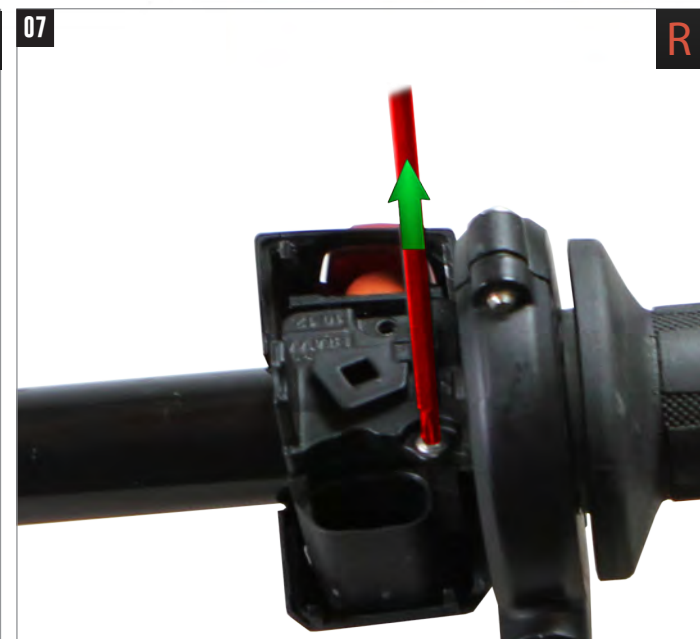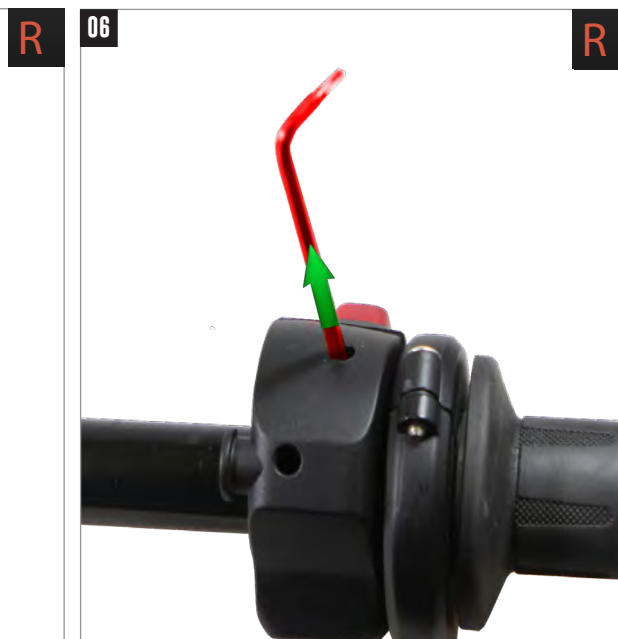

Später wieder in umgekehrter Reihenfolge zusammen setzen.

Afterwards mount again in reverse order.



KUPPLUNGSLEITUNG auf Spannung überprüfen, gegebenenfalls wie auf Bild 14-25 verlegen und entlüften. Die Montage sollte von Fachpersonal, bzw. einer Fachwerkstatt durchgeführt werden! Lenker auf Null-Stellung positionieren.


Before fitting the handlebar risers you have to mount and vent the clutch cable in a stress relieved way (image 14-25). Therefore we strongly suggest that you entrust this installation to a knowledgeable and properly equipped technician. Position the handlebar to zero.




Wunderlich®
complete your BMW.



Die Farben der Abbildungen dienen nur der Veranschaulichung. | The colors are for illustrating purposes only.

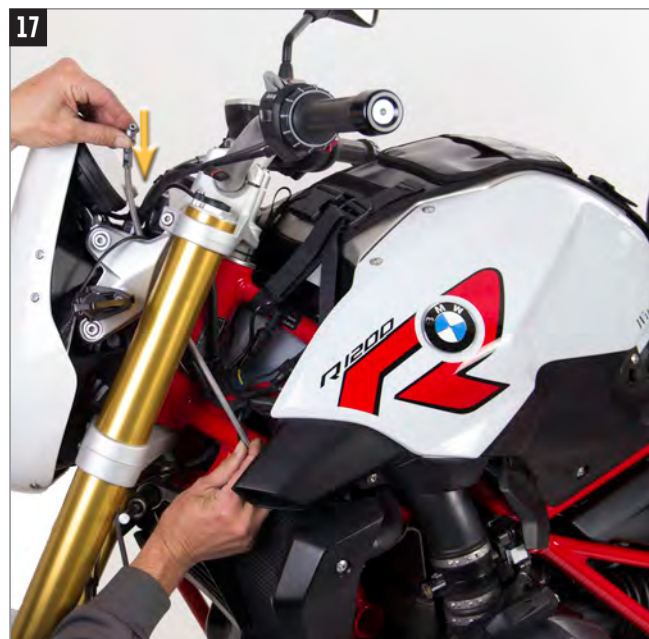

Die Farben der Abbildungen dienen nur der Veranschaulichung. | The colors are for illustrating purposes only.

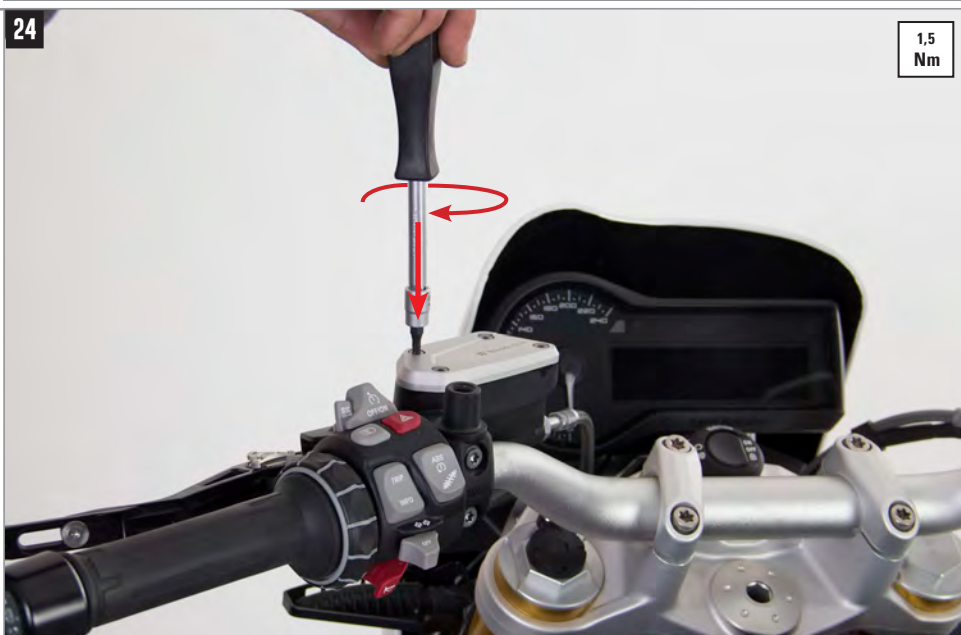

23 **PUMPE ENTLÜFTEN !**
Bleed the pump !

